



Spare parts for:

## Coffee grinders



Suitable for:

# QUAMAR



This catalogue is automatically generated.  
Therefore, the sequence of the items might  
not be always shown at best.

Updates will be issued in case of additions  
and/or amendments.

 
*Suitable universal spare parts may not be included*





## GRINDER ASSEMBLY T48

T48

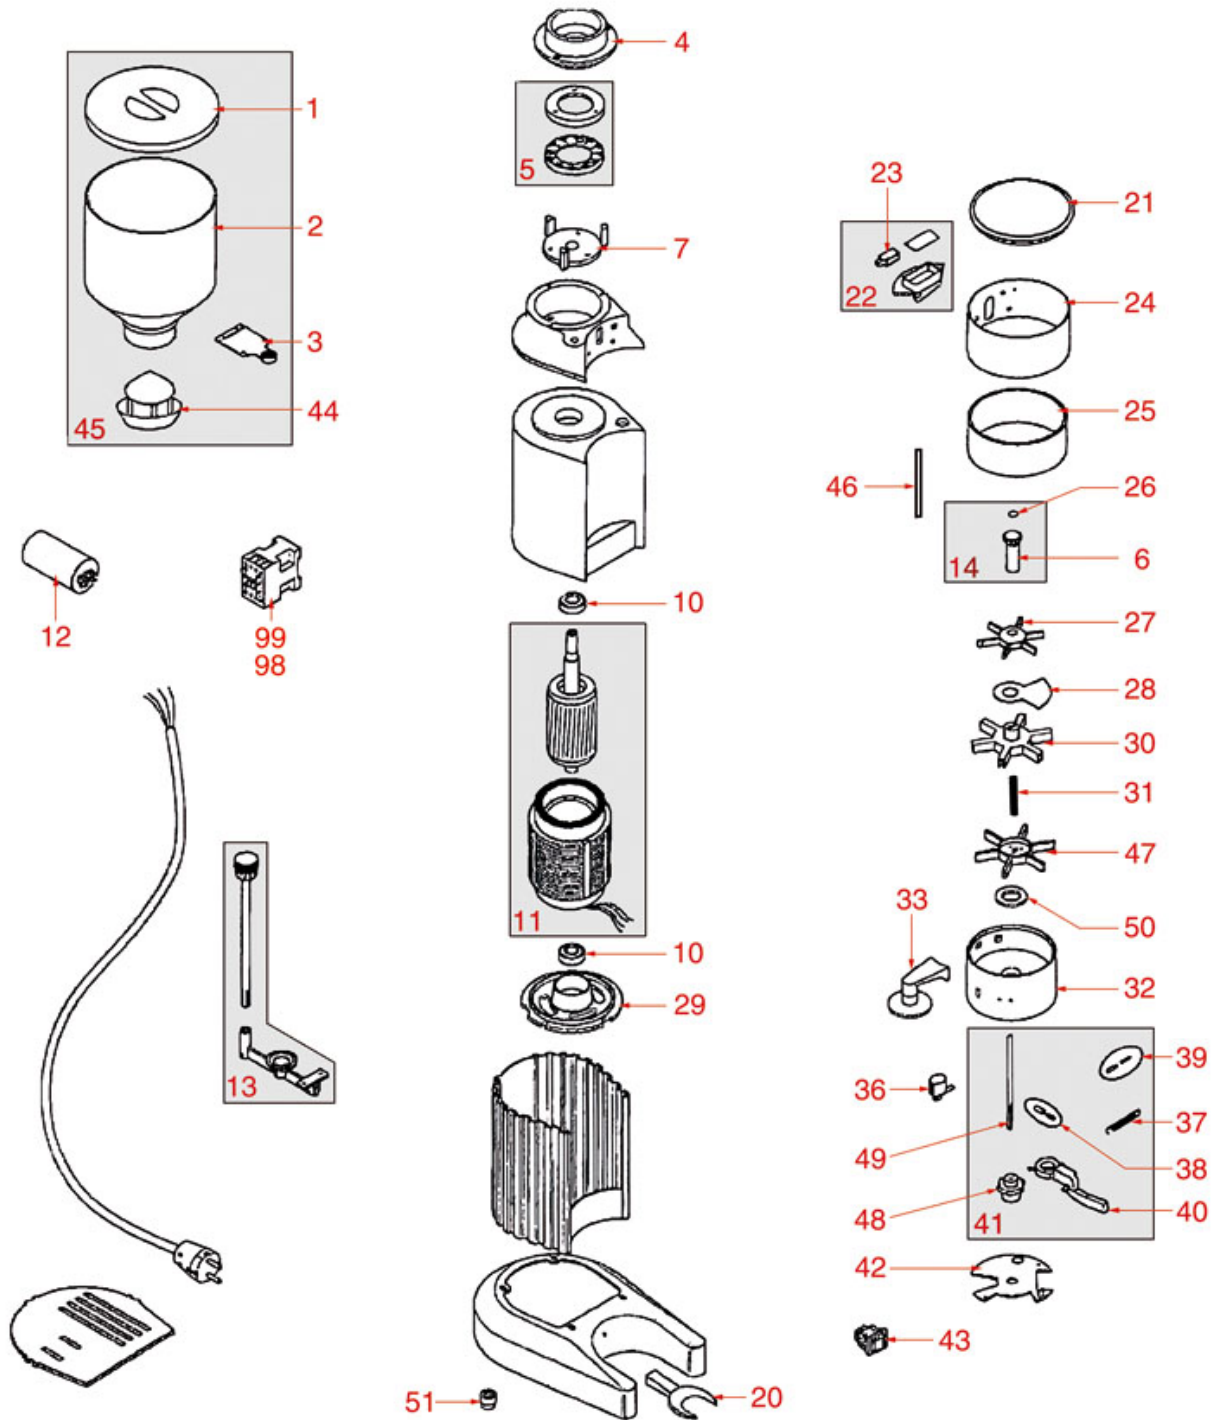



# QUAMAR

 


Position	LF code no.	Description
1	1252116	COFFEE HOPPER LID ø 205 mm
2	1080921	COFFEE CONTAINER 1.5Kg ø 200 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1251931	UPPER BURRS HOLDER
5	1251052	GRINDING BURRS FIORENTINO MS (PAIR) RH
6	1252118	MIXER KNOB
7	1251932	LOWER BURRS HOLDER
10	1063906	BEARING 6203 2Z
12	3068027	CAPACITOR µF 20 450V 50/60Hz
13	1252119	MICROMETER ADJUSTMENT CONTROL LEVER T48
14	1252120	MIXER KNOB ASSEMBLY
20	1252121	FILTER HOLDER FORK
21	1252122	DOSER LID
22	1252123	AUTOMATIC T48 BOX ASSEMBLY
23	1252151	AUTOMATIC BOX ASSEMBLY
25	1520901	DOSER CYLINDER
27	1252126	STIRRING WHEEL T48
28	1252127	CLOSING SECTOR
30	1343911	UPPER STAR NEW MODEL
31	1250961	DOSING SYSTEM SPRING
32	1252129	DOSER CYLINDER SUPPORT
33	1385546	COFFEE TAMPER ø 56 mm
36	1252139	GRINDER-DOSER COUNTER
37	1250962	DISPENSER LEVER RETURN SPRING
38	1250963	FEEDING SPRING FOR DISPENSER
39	1250964	DISPENSER CATCH RATCHET SPRING
40	1252132	DOSER LEVER
41	1252133	COMPLETE DOSER LEVER
42	1252134	DOSER LOWER LID
43	3319016	RED BIPOLAR SWITCH 16A 250V
43	3319501	SWITCH PROTECTION CAP
44	1252135	COFFEE HOPPER INNER PROTECTION
45	1080922	COMPLETE COFFEE HOPPER
47	1343912	LOWER STAR NEW MODEL
48	1252137	DOSER PAWL RH
49	1324908	PIN FOR DISPENSER T80/T48
50	1252138	DOSER PLASTIC WASHER
51	1313911	FOOT M1/T48/T82/T65
98	1454902	CONTACTOR LOVATO BG0910A
99	3446556	CONTACTOR LOVATO BG0910A



## GRINDER ASSEMBLY T80

T80

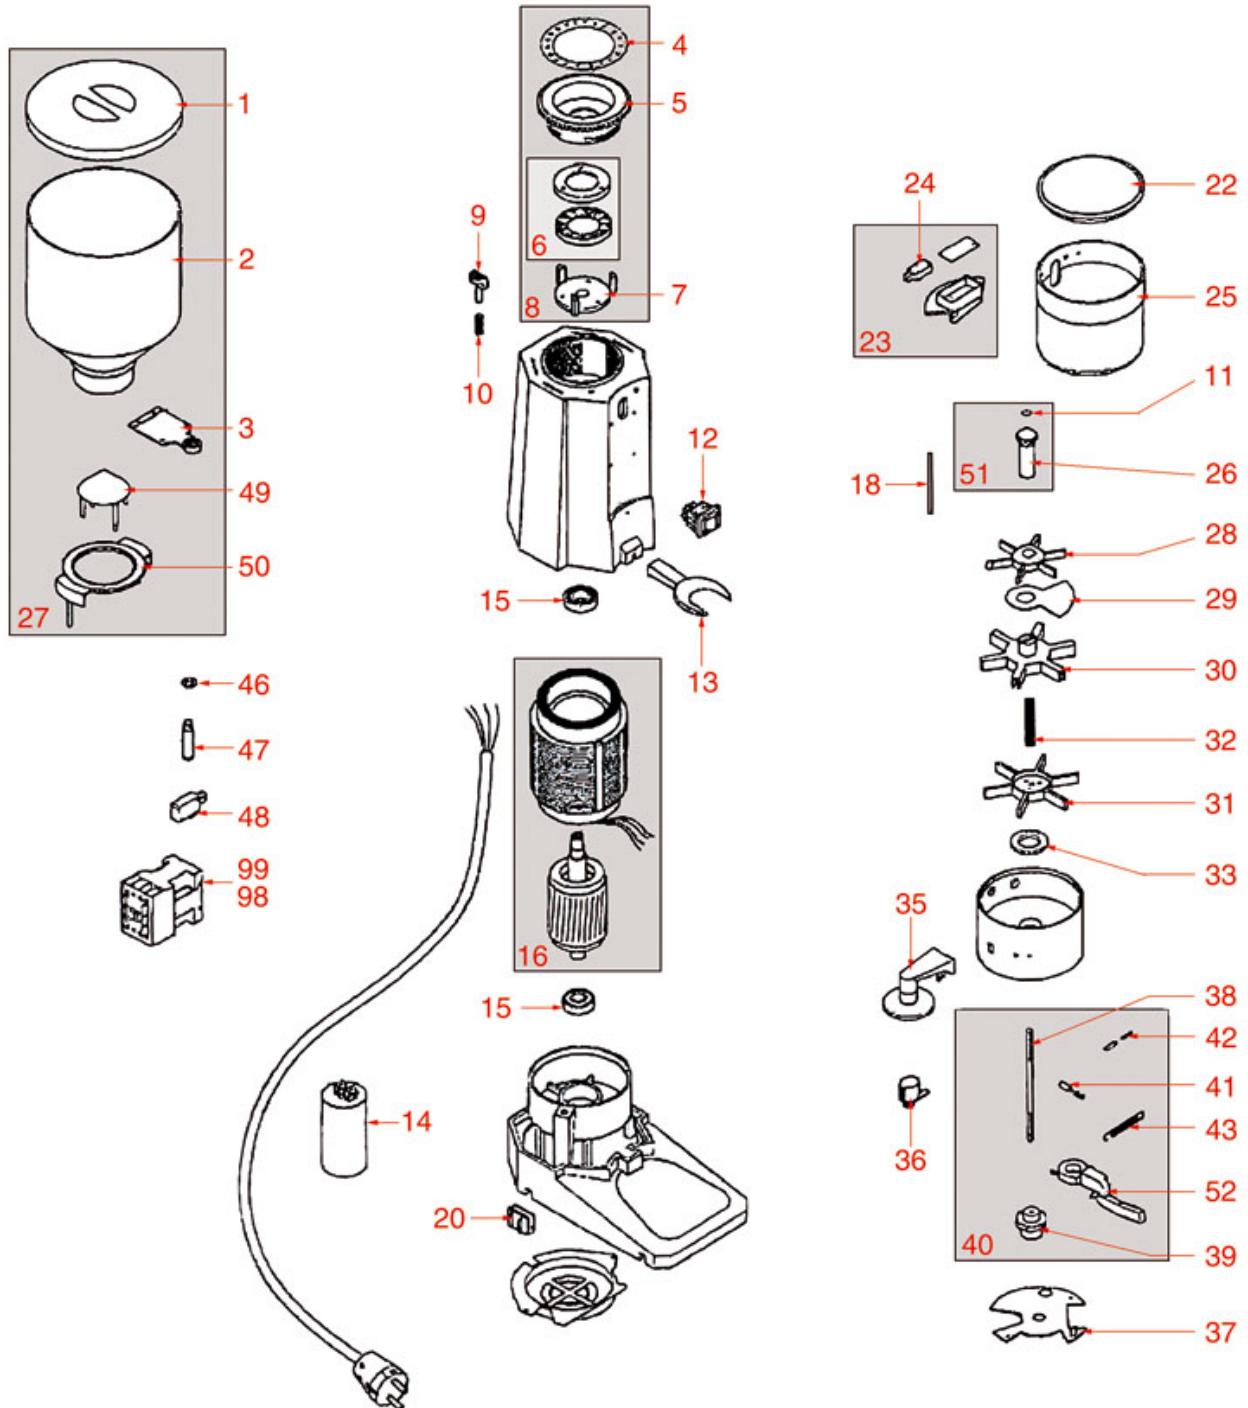



# QUAMAR

 


Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1252142	GRIND SELECTION LABEL
5	1252143	UPPER GRINDER BURRS RING NUT
6	1251078	GRINDING BURRS FIORENZATO CS RIGHT
7	1251936	LOWER BURRS HOLDER
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	3319012	GREEN BIPOLAR SWITCH 16A 250V
12	3319501	SWITCH PROTECTION CAP
13	1252121	FILTER HOLDER FORK
14	3068024	CAPACITOR µF 16 450V 50/60Hz
15	1063906	BEARING 6203 2Z
20	1313912	FOOT T80
22	1252150	DISPENSER LID
23	1252151	AUTOMATIC BOX ASSEMBLY
24	1252151	AUTOMATIC BOX ASSEMBLY
25	1520902	DISPENSER CYLINDER
26	1252118	MIXER KNOB
27	1080927	COMPLETE COFFEE HOPPER
28	1252126	STIRRING WHEEL T48
29	1252127	CLOSING SECTOR
30	1343911	UPPER STAR NEW MODEL
31	1343912	LOWER STAR NEW MODEL
32	1250961	DOSING SYSTEM SPRING
33	1252138	DOSER PLASTIC WASHER
35	1385546	COFFEE TAMPER ø 56 mm
36	1252139	GRINDER-DOSER COUNTER
37	1252134	DOSER LOWER LID
38	1324908	PIN FOR DISPENSER T80/T48
39	1252137	DOSER PAWL RH
40	1252133	COMPLETE DOSER LEVER
41	1250963	FEEDING SPRING FOR DISPENSER
41	1252130	FEEDING PAL D6
43	1250962	DISPENSER LEVER RETURN SPRING
46	1252149	SAFETY MICROSWITCH HOLDER RING T80
48	1240949	MICROSWITCH T80 CE SAFETY
49	1252147	COFFEE HOPPER INNER PROTECTION
50	1252148	COFFEE HOPPER INNER PROTECTION
51	1252120	MIXER KNOB ASSEMBLY
52	1252132	DOSER LEVER
98	1454902	CONTACTOR LOVATO BG0910A
99	3446556	CONTACTOR LOVATO BG0910A



## COFFEE GRINDER T80D

**T80D**

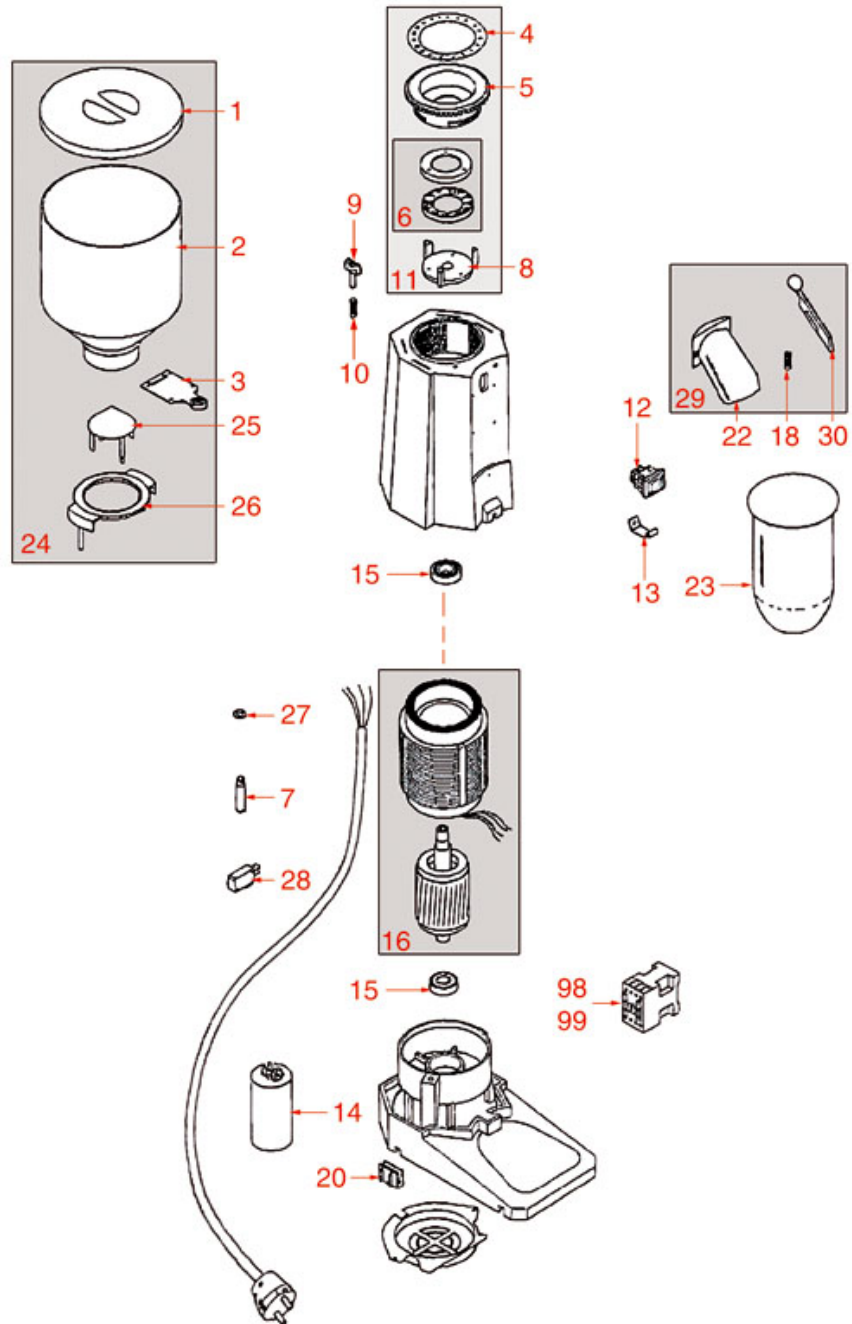




# QUAMAR



Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1252142	GRIND SELECTION LABEL
5	1252143	UPPER GRINDER BURRS RING NUT
6	1251078	GRINDING BURRS FIORENZATO CS RIGHT
8	1251936	LOWER BURRS HOLDER
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	3319012	GREEN BIPOLAR SWITCH 16A 250V
12	3319501	SWITCH PROTECTION CAP
14	3068024	CAPACITOR µF 16 450V 50/60Hz
15	1063906	BEARING 6203 2Z
20	1313912	FOOT T80
23	1252146	GRINDED COFFEE CONTAINER T80/D
24	1080927	COMPLETE COFFEE HOPPER
25	1252147	COFFEE HOPPER INNER PROTECTION
26	1252148	COFFEE HOPPER INNER PROTECTION
27	1252149	SAFETY MICROSWITCH HOLDER RING T80
28	1240949	MICROSWITCH T80 CE SAFETY
29	1252160	SPOUT ASSEMBLY T80/D
98	1454902	CONTACTOR LOVATO BG0910A
99	3446556	CONTACTOR LOVATO BG0910A


 
## GRINDER ASSEMBLY M80

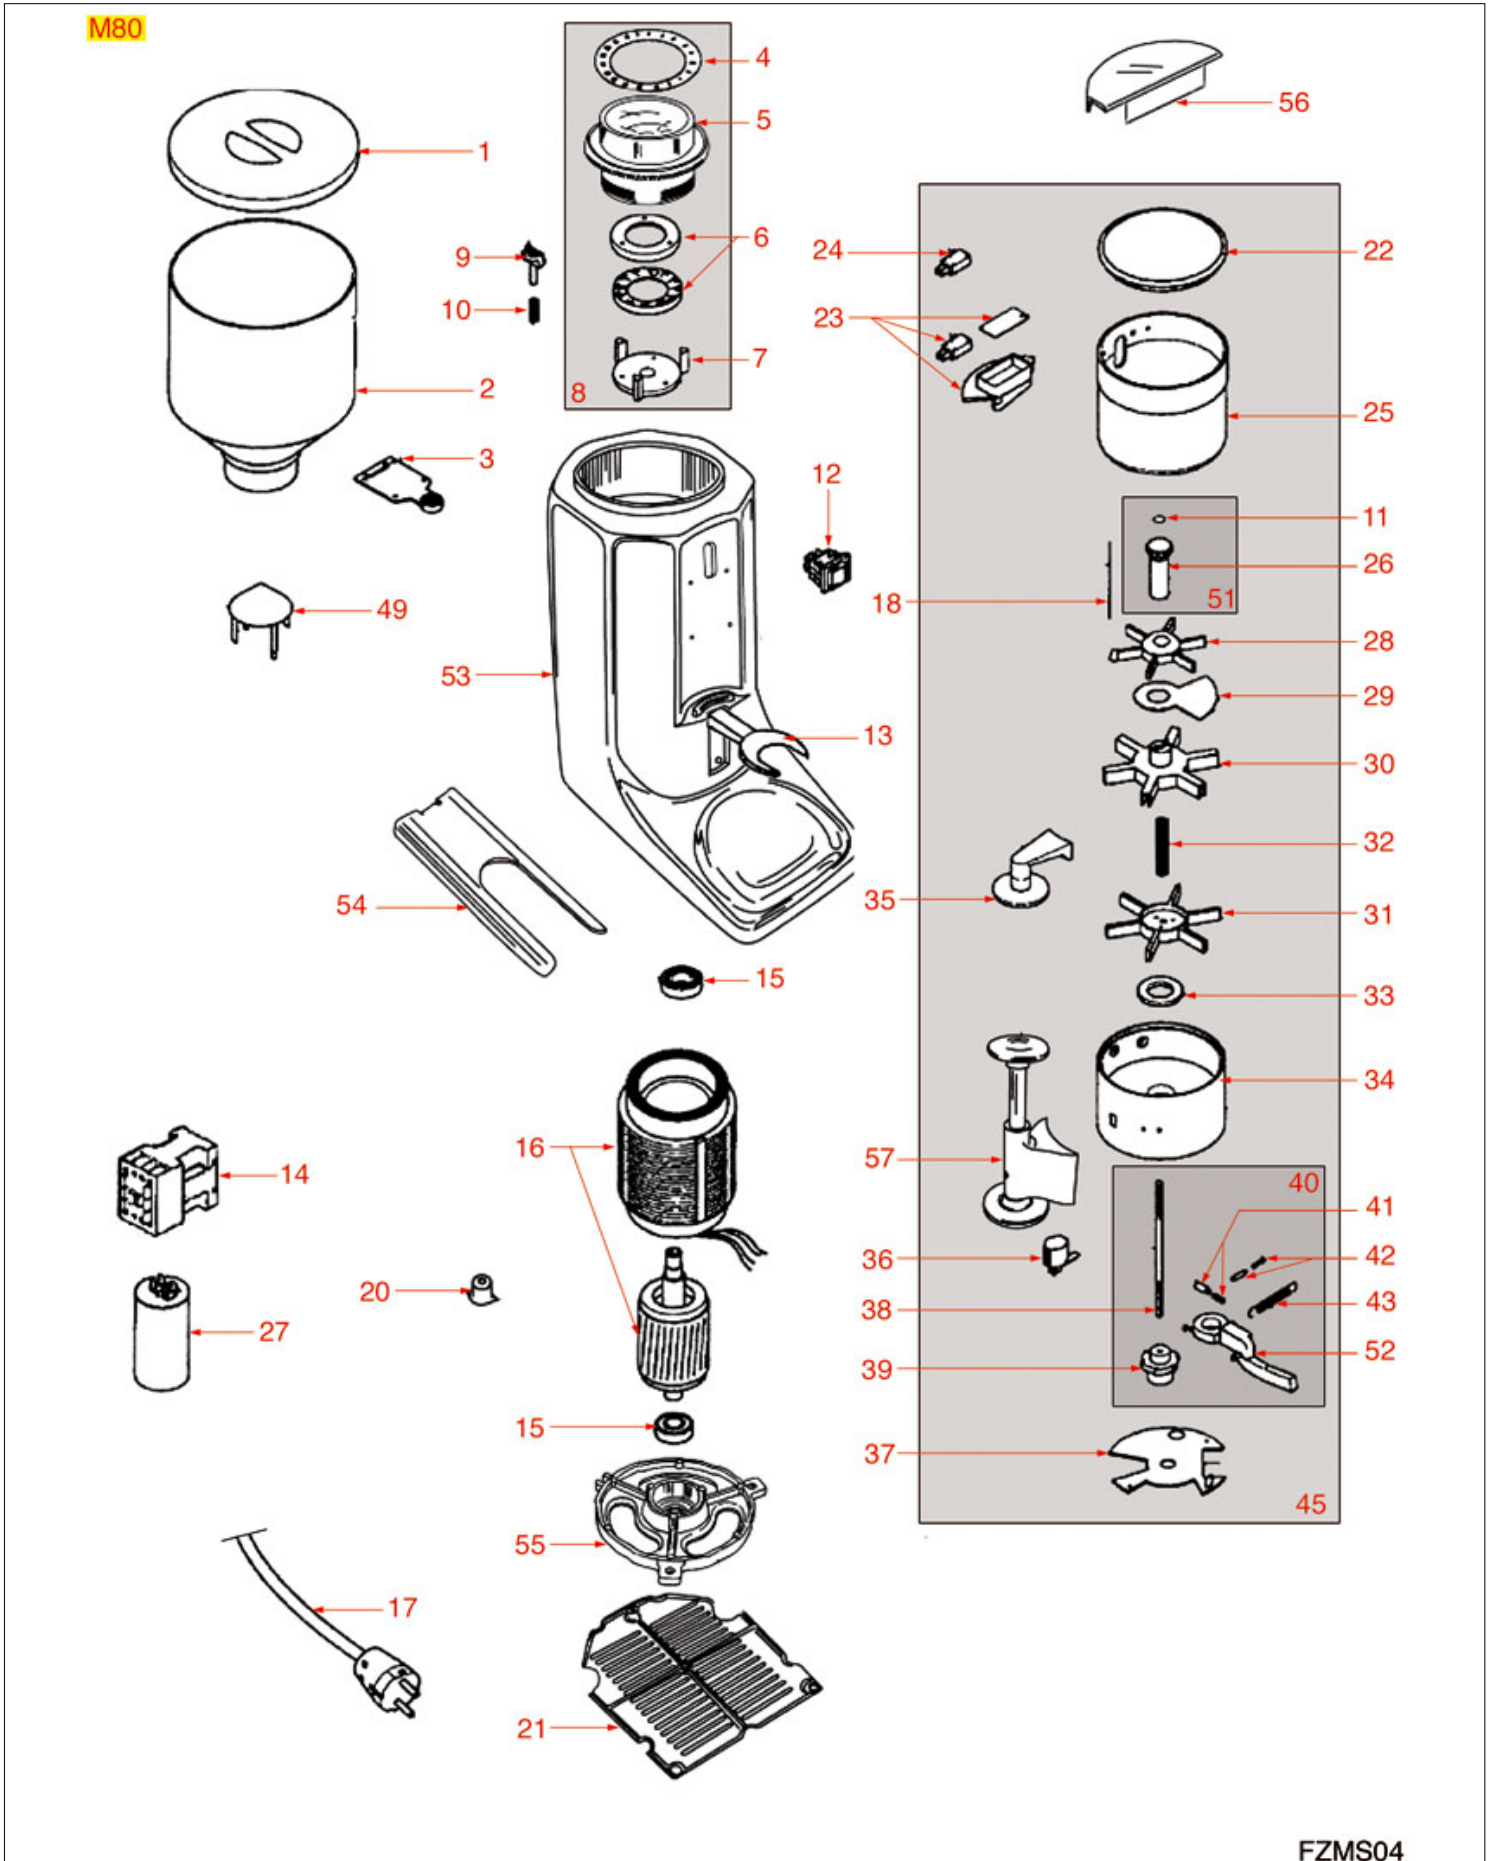






# QUAMAR



Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
6	1251078	GRINDING BURRS FIORENZATO CS RIGHT
7	1251936	LOWER BURRS HOLDER
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	3319012	GREEN BIPOLAR SWITCH 16A 250V
12	3319016	RED BIPOLAR SWITCH 16A 250V
12	3319501	SWITCH PROTECTION CAP
13	1252121	FILTER HOLDER FORK
14	1454902	CONTACTOR LOVATO BG0910A
14	3446556	CONTACTOR LOVATO BG0910A
15	1063911	BEARING 6202 2Z
20	1313921	FOOT FOR MIXER
22	1252150	DISPENSER LID
23	1252151	AUTOMATIC BOX ASSEMBLY
25	1520902	DISPENSER CYLINDER
26	1252118	MIXER KNOB
28	1252126	STIRRING WHEEL T48
29	1252127	CLOSING SECTOR
30	1343911	UPPER STAR NEW MODEL
31	1343912	LOWER STAR NEW MODEL
32	1250961	DOSING SYSTEM SPRING
33	1252138	DOSER PLASTIC WASHER
35	1385546	COFFEE TAMPER ø 56 mm
36	1252139	GRINDER-DOSER COUNTER
37	1252134	DOSER LOWER LID
39	1252137	DOSER PAWL RH
40	1252133	COMPLETE DOSER LEVER
41	1250963	FEEDING SPRING FOR DISPENSER
41	1252130	FEEDING PAL D6
42	1250964	DISPENSER CATCH RATCHET SPRING
43	1250962	DISPENSER LEVER RETURN SPRING
49	1252147	COFFEE HOPPER INNER PROTECTION
51	1252120	MIXER KNOB ASSEMBLY
52	1252132	DOSER LEVER


 
## GRINDER ASSEMBLY M1

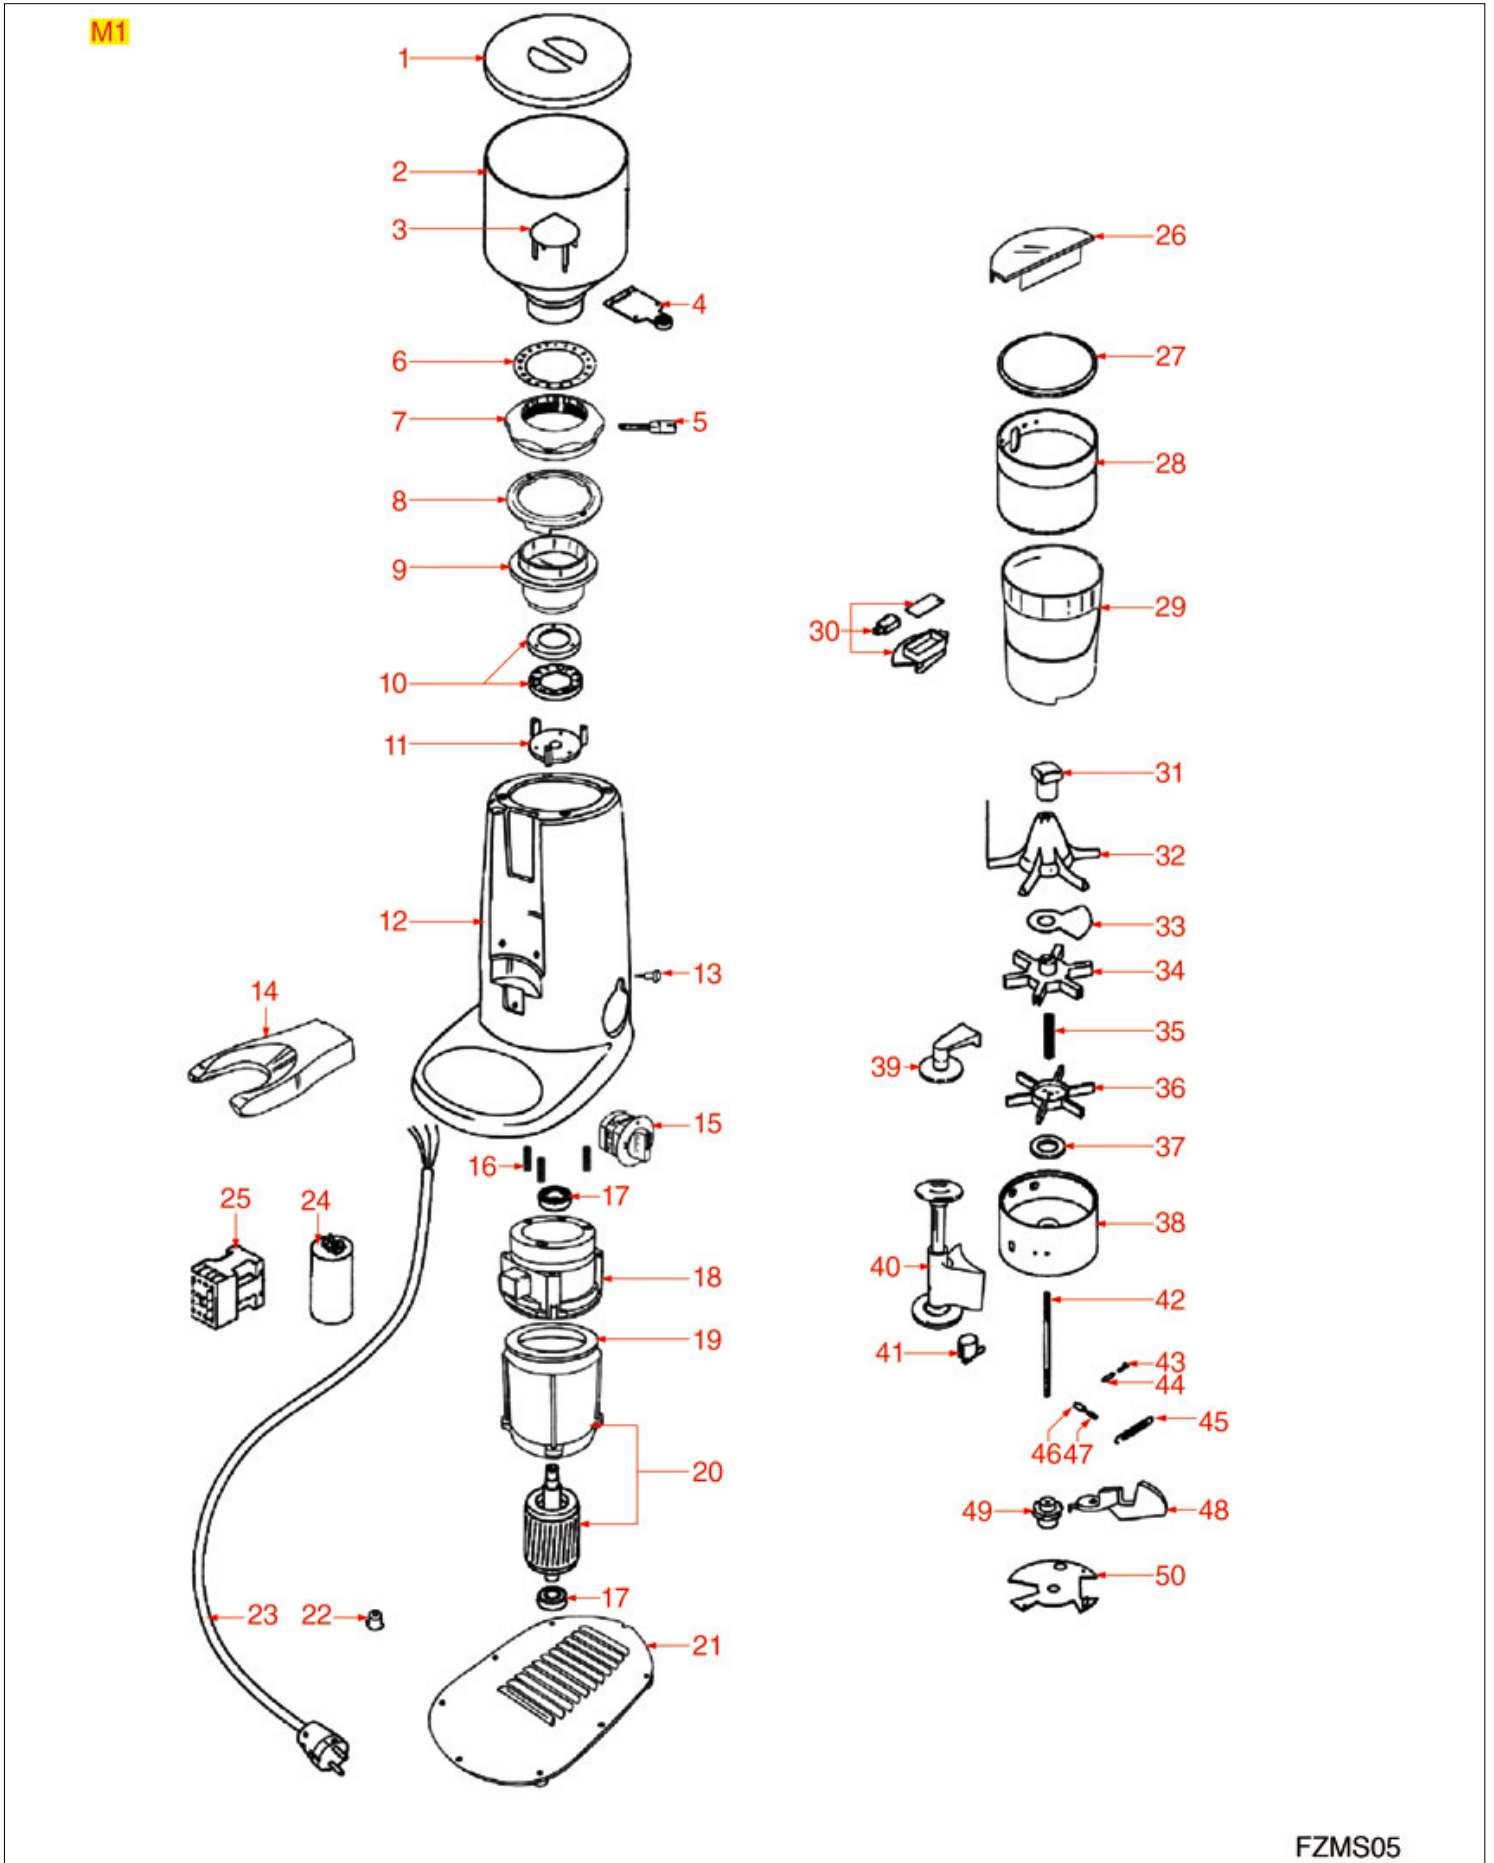



# QUAMAR

 


Position	LF code no.	Description
1	1252116	COFFEE HOPPER LID ø 205 mm
2	1080921	COFFEE CONTAINER 1.5Kg ø 200 mm
3	1252147	COFFEE HOPPER INNER PROTECTION
4	1252117	COFFEE HOPPER CLOSING SHEET
10	1251078	GRINDING BURRS FIORENTINO CS RIGHT
11	1251936	LOWER BURRS HOLDER
17	1063911	BEARING 6202 2Z
22	1313911	FOOT M1/T48/T82/T65
24	3068027	CAPACITOR µF 20 450V 50/60Hz
25	1454902	CONTACTOR LOVATO BG0910A
25	3446556	CONTACTOR LOVATO BG0910A
27	1252150	DISPENSER LID
28	1520902	DISPENSER CYLINDER
30	1252151	AUTOMATIC BOX ASSEMBLY
35	1250961	DOSING SYSTEM SPRING
37	1252138	DOSER PLASTIC WASHER
41	1252139	GRINDER-DOSER COUNTER
42	1324908	PIN FOR DISPENSER T80/T48
44	1250964	DISPENSER CATCH RATCHET SPRING
45	1250962	DISPENSER LEVER RETURN SPRING
46	1252130	FEEDING PAL D6
47	1250963	FEEDING SPRING FOR DISPENSER
50	1252134	DOSER LOWER LID



## COFFEE GRINDER ELECTRONIC M1E

M1E

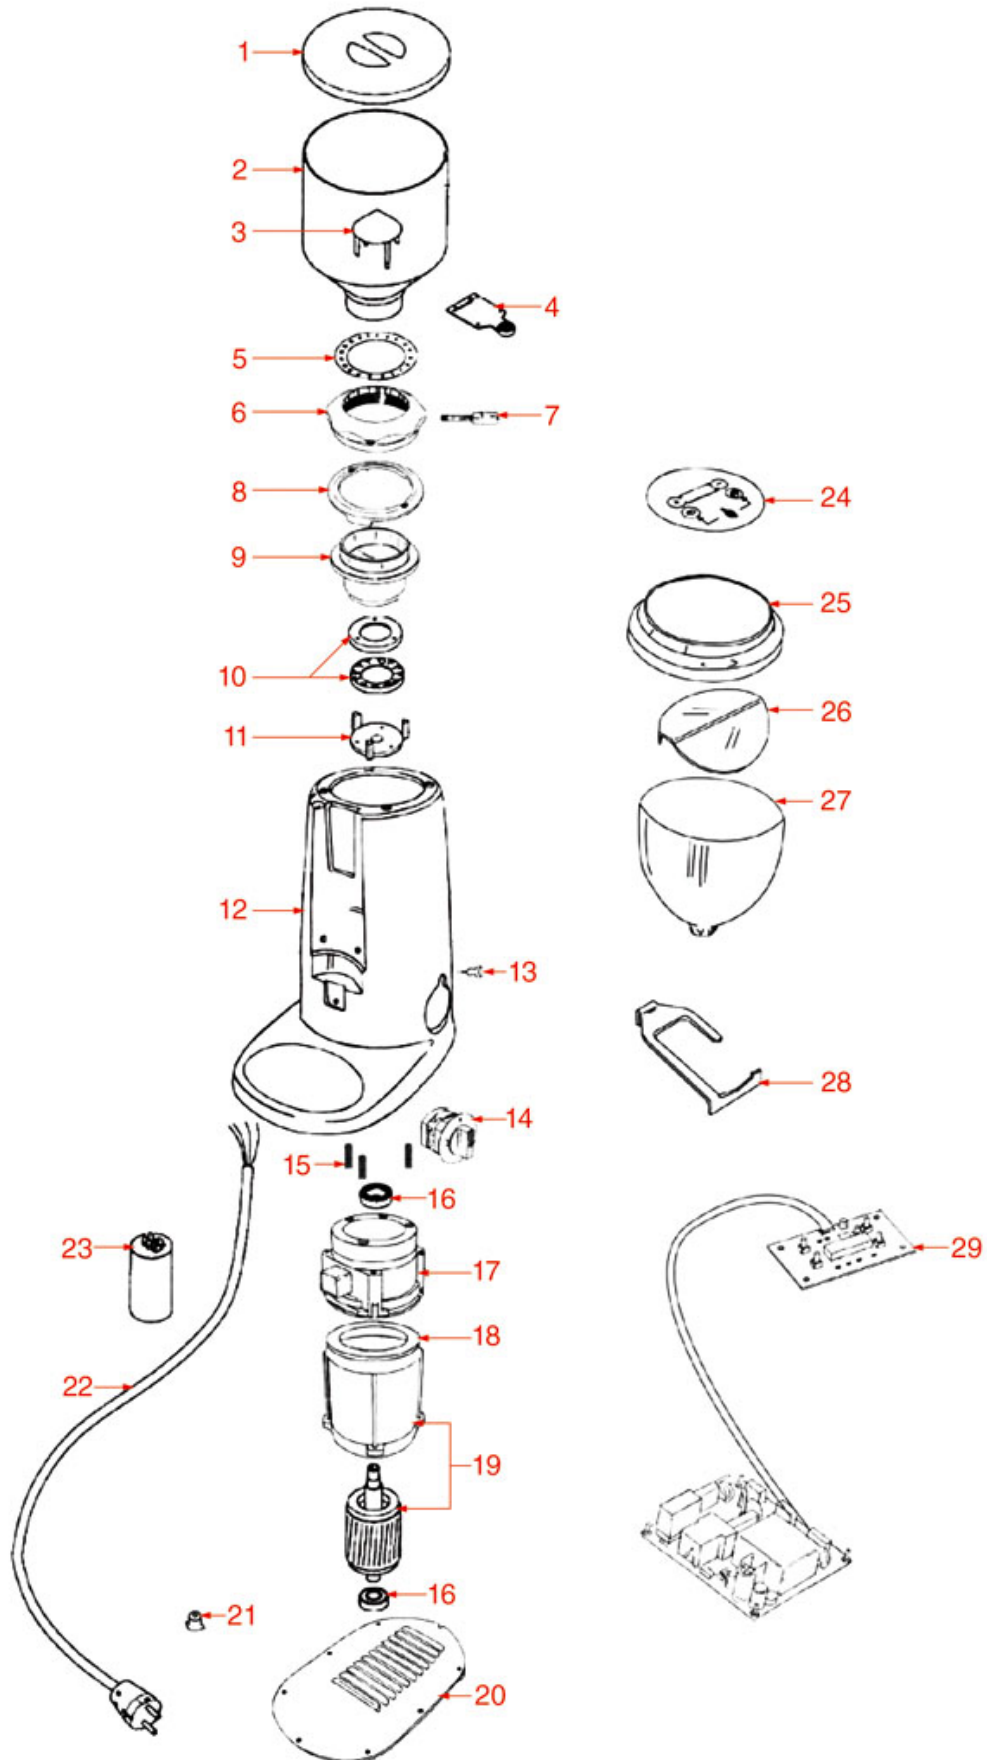



# QUAMAR



Position	LF code no.	Description
1	1252116	COFFEE HOPPER LID ø 205 mm
2	1080921	COFFEE CONTAINER 1.5Kg ø 200 mm
3	1252147	COFFEE HOPPER INNER PROTECTION
4	1252117	COFFEE HOPPER CLOSING SHEET
10	1251078	GRINDING BURRS FIORENZATO CS RIGHT
10	1251185	GRINDING BURRS PAIR FIORENZATO MS RH
16	1063911	BEARING 6202 2Z
21	1313911	FOOT M1/T48/T82/T65
23	3068027	CAPACITOR µF 20 450V 50/60Hz



Suitable for:

 
# QUAMAR



Suitable for:

## Adhesive labels

**1252142 GRIND SELECTION LABEL**  
for Grinder-dispenser (QUAMAR) T80 - T80D

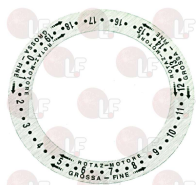

QUAMAR 240022

## Bearings

**1063911 BEARING 6202 2Z**  
external  $\varnothing$  35 mm-internal  $\varnothing$  15 mm-thickness 11 mm



QUAMAR 260005

**1063906 BEARING 6203 2Z**  
external  $\varnothing$  40 mm-internal  $\varnothing$  17 mm-thickness 12 mm



QUAMAR 260006

## Bodies

**1252160 SPOUT ASSEMBLY T80/D**



QUAMAR RMT80D001

## Capacitors

**3068024 CAPACITOR  $\mu$ F 16 450V 50/60Hz**  
operating temperature  $-25+85^{\circ}\text{C}$   
in compliance with EEC 93/68 and 92/31 regulations




QUAMAR 150063

**3068027 CAPACITOR  $\mu$ F 20 450V 50/60Hz**  
operating temperature  $-25+85^{\circ}\text{C}$   
in compliance with EEC 93/68 and 92/31 regulations



QUAMAR 150064

 **3068014 CAPACITOR  $\mu$ F 8 450V 50/60Hz**  
operating temperature  $-25+85^{\circ}\text{C}$   
in compliance with EEC 93/68 and 92/31 regulations

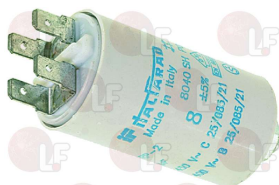

QUAMAR 150070



## Containers for coffee

**1080926 COFFEE CONTAINER 1.2Kg ø 175 mm**  
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D



QUAMAR 160080

**1080921 COFFEE CONTAINER 1.5Kg ø 200 mm**  
for Grinder-dispenser (QUAMAR) M1 - T48



QUAMAR 160076

**1252117 COFFEE HOPPER CLOSING SHEET**  
for Grinder-dispenser (QUAMAR) M80 - T48 - T80  
T80D



QUAMAR 160063

**1252135 COFFEE HOPPER INNER PROTECTION**  
for Grinder-dispenser (QUAMAR) T48



QUAMAR 160091

**1252147 COFFEE HOPPER INNER PROTECTION**  
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D




QUAMAR 160067

**1252148 COFFEE HOPPER INNER PROTECTION**  
for Grinder-dispenser (QUAMAR) T80 - T80D




QUAMAR 160066

 **1252141 COFFEE HOPPER LID ø 180 mm**  
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D

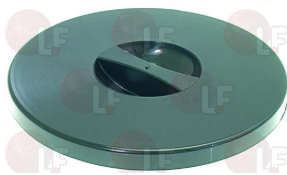

QUAMAR 160149

 **1252116 COFFEE HOPPER LID ø 205 mm**  
for Grinder-dispenser (QUAMAR) M1 - T48

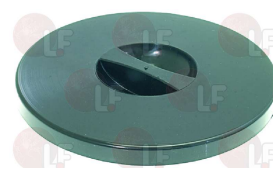

QUAMAR 160081

**1080922 COMPLETE COFFEE HOPPER**  
for Grinder-dispenser (QUAMAR) T48



QUAMAR RMT480001

QUAMAR 340066

**1080927 COMPLETE COFFEE HOPPER**  
for Grinder-dispenser (QUAMAR) T80 - T80D



QUAMAR RMT800001

QUAMAR 340068



Suitable for:

# QUAMAR



Suitable for:

**1252146 GRINDED COFFEE CONTAINER T80/D**



QUAMAR 180044

## Counters

**1252139 GRINDER-DOSER COUNTER**  
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR 210033

## Dosers for coffee

**1520902 DISPENSER CYLINDER**  
for Grinder-dispenser (QUAMAR) M1 - M80 - T80




QUAMAR RMT800004

QUAMAR 160083


QUAMAR 340231

 **1252150 DISPENSER LID**  
for Grinder-dispenser (QUAMAR) M1 - M80 - T80

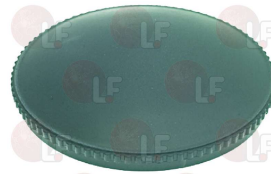


QUAMAR 160064

 **1520901 DOSER CYLINDER**  
for Grinder-dispenser (QUAMAR) T48

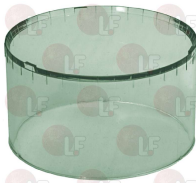


QUAMAR 160079

 **1252129 DOSER CYLINDER SUPPORT**  
for Grinder-dispenser (QUAMAR) T48

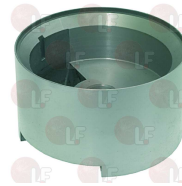


QUAMAR 170109

 **1252122 DOSER LID**  
for Grinder-dispenser (QUAMAR) T48

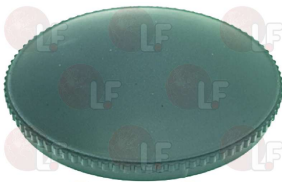

QUAMAR 160078

**1252134 DOSER LOWER LID**

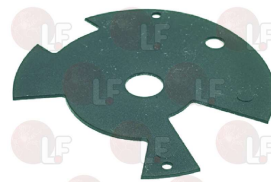 

QUAMAR 160074





Suitable for:

Suitable for:

**1324908 PIN FOR DISPENSER T80/T48**



QUAMAR 110030


## Feet

**1313921 FOOT FOR MIXER**



QUAMAR 160098

 **1313911 FOOT M1/T48/T82/T65**

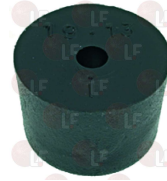

QUAMAR 160096

**1313912 FOOT T80**



QUAMAR 160097

## Forks for portafilter coffee grinder

**1252121 FILTER HOLDER FORK**  
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR 170033

QUAMAR 170044

## Gaskets and seals

**1252138 DOSER PLASTIC WASHER**



QUAMAR 160065



Suitable for:

# QUAMAR



Suitable for:

## Grinders

**1251078 GRINDING BURRS FIORENZATO CS RIGHT**  
 external  $\varnothing$  63 mm - internal  $\varnothing$  38 mm  
 thickness 9.5 mm - 3 mounting holes  
 for Grinder-dispenser (FIORENZATO C.S.) DOGE63  
 for Grinder-dispenser (QUAMAR) M1 - M80 - T80  
 T80D  
 for Grinder-dispenser (VIBIEMME) VB63



QUAMAR 260001

**1251052 GRINDING BURRS FIORENZATO MS (PAIR) RH**  
 external  $\varnothing$  83 mm - internal  $\varnothing$  45 mm  
 thickness 10 mm - 3 fixing holes  
 for Grinder-dispenser (QUAMAR) T48



QUAMAR 260003


**1251185 GRINDING BURRS PAIR FIORENZATO MS RH**  
 external  $\varnothing$  75 mm - internal  $\varnothing$  43 mm  
 thickness 10.5 mm - 3 fastening holes  
 for Grinder-dispenser (QUAMAR) M1/E



QUAMAR 260002

## Grinding burr holders

 **1251932 LOWER BURRS HOLDER**  
 for Grinder-dispenser (QUAMAR) T48

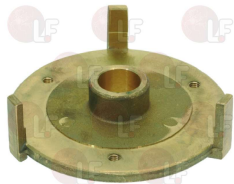

QUAMAR 170106

QUAMAR 340181

QUAMAR 340183

**1251936 LOWER BURRS HOLDER**  
 for Grinder-dispenser (QUAMAR) M1 - M80 - T80  
 T80D



QUAMAR 170090

QUAMAR 340182

**1251931 UPPER BURRS HOLDER**  
 for Grinder-dispenser (QUAMAR) T48



QUAMAR 170108

**1252143 UPPER GRINDER BURRS RING NUT**  
 for Grinder-dispenser (QUAMAR) T80 - T80D



QUAMAR 170091

QUAMAR 340147



## Ironmongery (screws,nuts,washers)

1252149 SAFETY MICROSWITCH HOLDER RING T80



QUAMAR 130068

## Knobs

1252118 MIXER KNOB



QUAMAR 160059

1252120 MIXER KNOB ASSEMBLY



QUAMAR RMT800013

QUAMAR 340120

## Levers

1252133 COMPLETE DOSER LEVER  
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR RMUNI0007

QUAMAR 340159

1252132 DOSER LEVER  
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR RMUNI0009

QUAMAR 160075

## Microswitches

1252151 AUTOMATIC BOX ASSEMBLY



QUAMAR RMT800002


QUAMAR 210031

1252123 AUTOMATIC T48 BOX ASSEMBLY



QUAMAR RMT480003

 1240949 MICROSWITCH T80 CE SAFETY  
for Grinder-dispenser (QUAMAR) T80 - T80D

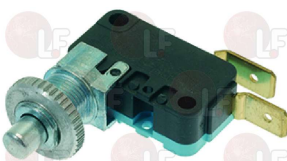

QUAMAR 210014

3240123 MICROSWITCH 16A 250V



QUAMAR 210029



Suitable for:

# QUAMAR



Suitable for:

## Pawls for coffee grinder dosers

**1252137 DOSER PAWL RH**



QUAMAR RMUNI0008

QUAMAR 160068

## Pins

**1252130 FEEDING PAL D6**



QUAMAR 130059

**1252119 MICROMETER ADJUSTMENT CONTROL LEVER T48**



QUAMAR RMT480005

**1252144 RING-RETAINING RATCHET**




QUAMAR 160062

## Remote control switches

**1454902 CONTACTOR LOVATO BG0910A**

 
9A 400V 50Hz 4Kw  
3 closed power contacts  
1 open auxiliary contact

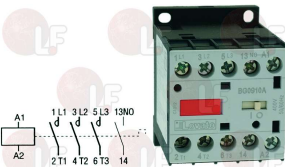

QUAMAR 210035

**3446556 CONTACTOR LOVATO BG0910A**

 coil 9A 230V 50/60Hz 4Kw  
3 normally open contacts  
1 normally open auxiliary contact

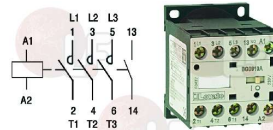

QUAMAR 210034

## Springs

**1250964 DISPENSER CATCH RATCHET SPRING**



QUAMAR 230028

**1250962 DISPENSER LEVER RETURN SPRING**  
for FIORENZATO MS T48-T80-M80-M1



QUAMAR 230027



Suitable for:

**1250961 DOSING SYSTEM SPRING**



QUAMAR 230023

**1250966 RING CATCH SPRING**



QUAMAR 230013

Suitable for:

**1250963 FEEDING SPRING FOR DISPENSER**



QUAMAR 230029

## Stars and spare parts

**1252127 CLOSING SECTOR**




QUAMAR 160073

**1252126 STIRRING WHEEL T48**




QUAMAR 160072

 **1343912 LOWER STAR NEW MODEL**

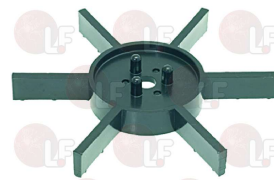

QUAMAR 160070


**1343911 UPPER STAR NEW MODEL**

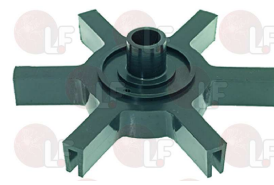 

QUAMAR 160071

## Switches

 **3319012 GREEN BIPOLAR SWITCH 16A 250V**  
with indicator light and switch cover  
screen printing 0 - I  
max temperature 120°C  
mounting hole 22x30 mm

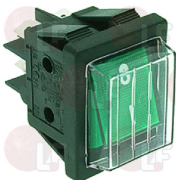

QUAMAR 210018

**3319016 RED BIPOLAR SWITCH 16A 250V**  
with indicator lamp  
silk-screen print 0 - I  
max temperature 120°C  
mounting hole 22x30 mm



QUAMAR 150027

QUAMAR 210018



Suitable for:

Suitable for:

**3319501 SWITCH PROTECTION CAP**  
external dimensions 29x36 mm  
for switches with mounting hole 22x30 mm



QUAMAR 210016

## Tampers for coffee

**1385546 COFFEE TAMPER ø 56 mm**



QUAMAR RMT800014

QUAMAR 160061

*The data herewith contained may change without notice and LF SpA cannot be held responsible for possible errors stated or resulting by the use of this document. All rights reserved. No part of this publication may be reproduced without written permission by LF SpA.*



**LF SpA**  
via Voltri, 80 - 47522 Cesena (FC) ITALIA  
Tel. +39 0547 34 11 11 - Fax +39 0547 34 11 10  
[www.lfricambi724.it](http://www.lfricambi724.it) - [www.lfricambi724.mobi](http://www.lfricambi724.mobi)  
[info@lfricambi.it](mailto:info@lfricambi.it)  
Export Dept.: Tel. +39 0547 34 11 50 - Fax: +39 0547 34 11 55  
[www.lfspareparts724.com](http://www.lfspareparts724.com) - [www.lfspareparts724.mobi](http://www.lfspareparts724.mobi)  
[export@lfspaceparts.com](mailto:export@lfspaceparts.com)

**FRANCE**



**EPGC Sas**  
13, Rue des Forts - 59960 Neuville en Ferrain  
Tél. +33 (0)3 20 25 06 21  
Fax +33 (0)3 20 25 34 12  
[www.epgc.com](http://www.epgc.com)  
[www.epgc724.mobi](http://www.epgc724.mobi)  
[epgc@epgc.com](mailto:epgc@epgc.com)

**DEUTSCHLAND**



**LF GmbH**  
Junkersstrasse, 1 - D-82178 Puchheim - München  
Tel. +49 89 89 45 78 66  
Fax +49 89 89 45 78 88  
[www.lfersatzteile724.de](http://www.lfersatzteile724.de)  
[www.lfersatzteile724.mobi](http://www.lfersatzteile724.mobi)  
[info@lfersatzteile.de](mailto:info@lfersatzteile.de)

**SCHWEIZ**



**LF GmbH Verkaufsbüro**  
Sennweidstrasse, 45 - CH-6312 Steinhausen  
Tel. +41 (0)41 760 15 80-1  
Fax +41 (0)41 760 15 85  
[www.lfersatzteile724.ch](http://www.lfersatzteile724.ch)  
[www.lfersatzteile724.mobi](http://www.lfersatzteile724.mobi)  
[info@lfersatzteile.ch](mailto:info@lfersatzteile.ch)

**ESPAÑA**



**LF Repuestos Horeca S.L.U.**  
Calle Ciudad Real, 10 - 45517 Escalonilla - Toledo  
Tif. +34 91 477 91 00  
Fax +34 91 477 90 81  
[www.lfrepuestos724.es](http://www.lfrepuestos724.es)  
[www.lfrepuestos724.mobi](http://www.lfrepuestos724.mobi)  
[info@lfrepuestos.es](mailto:info@lfrepuestos.es)

**UNITED KINGDOM**



**LF Spare Parts Ltd.**  
A10a Lakeside Business Park, Broadway Lane  
South Cerney, Gloucestershire GL7 5XL  
Tel. +44 (0)1285 86 16 25  
Fax +44 (0)1285 86 39 49  
[www.lfspareparts724.co.uk](http://www.lfspareparts724.co.uk)  
[www.lfspareparts724.mobi](http://www.lfspareparts724.mobi)  
[info@lfspaceparts.co.uk](mailto:info@lfspaceparts.co.uk)

**RUSSIA**



**OOO LF**  
ul, Anatoliya Zhivova, 8 - office 1 - 123100 Moscow  
Tel. +7 499 259 85 75  
Fax +7 495 725 26 53  
[www.lfspareparts724.ru](http://www.lfspareparts724.ru)  
[www.lfspareparts724.mobi](http://www.lfspareparts724.mobi)  
[info@lfspaceparts.ru](mailto:info@lfspaceparts.ru)

**CHINA**



**LF China**  
Room 102, House 8, Lane 725, Mao Tai Rd.  
Changning Dist. - 200336 Shanghai  
Tel. +86 (0)21 33 53 66 31  
Fax +86 (0)21 33 53 66 32  
[www.lfspareparts724.com](http://www.lfspareparts724.com)  
[www.lfspareparts724.mobi](http://www.lfspareparts724.mobi)  
[china@lfspaceparts.com](mailto:china@lfspaceparts.com)